




Application Bulletin 3611

Dispensing and Assembly using UV Cure Adhesive


The RP series is perfect for mounting fixturing, tooling or custom mechanisms such as this assembly station which utilizes a magazine to shuttle glass slides to be joined with 4 plastic discs.

The system easily controls all functions using external sensors and devices. No third party controller is required, as the software provides real time machine functionality and enhanced features.

The dispensing path may be defined with a DXF, PLT or G Code file or recorded with the advanced Jog & Teach function.

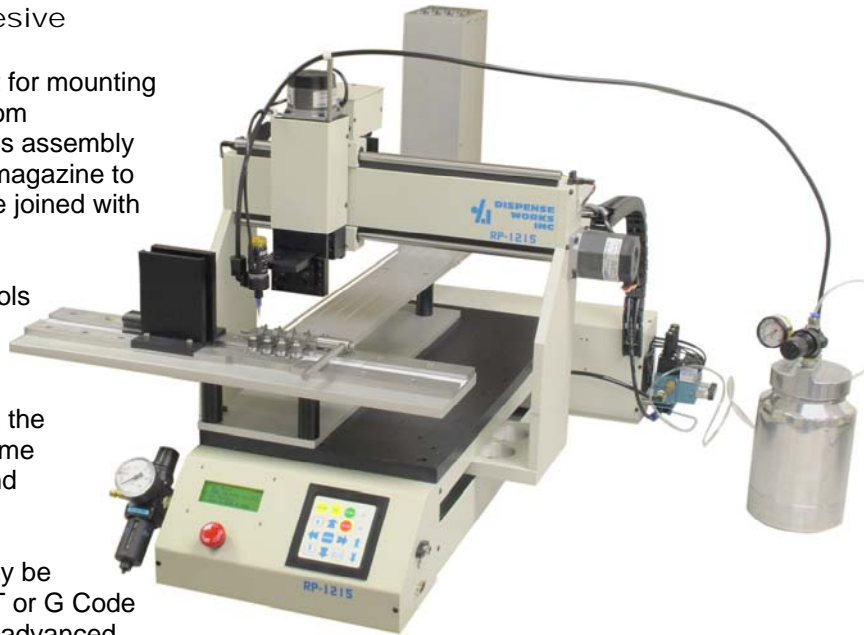

The Popular RP-1215 Robot

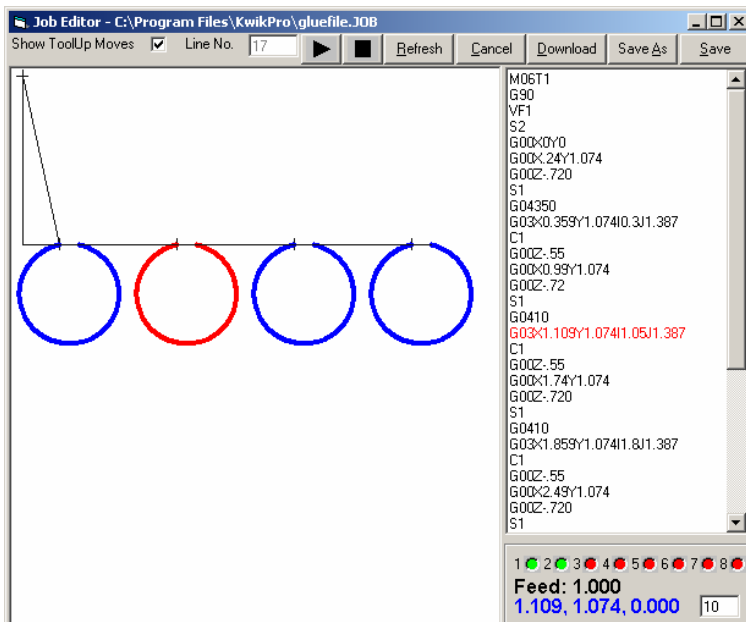

Animated Simulation of Motion

The path may be simulated graphically with the Windows Software Suite option. This function also allows editing and reordering the lines.

A list of standard and special commands, which are optimized for dispensing, make setup a snap!