



Application Bulletin 3615

2 Part Standard Hysol Epoxy


The pneumatic 2 part dispense head streamlines dispensing materials from standard cartridges and caulk tubes. An exclusive twin rod piston design pushes the materials through the meter mixing nozzle accurately onto your parts.

Simple front panel control provides setup and purging functions as well as machine control and complete file management.

Parts remain static on the large and stationary (12" x 24") machine bed which provides easy mounting of fixtures, nests, purge cups etc.

The Pro-Pallet System

Includes 2 removable pallets to streamline production by allowing the operator to load / unload one pallet while the machine processes the other.

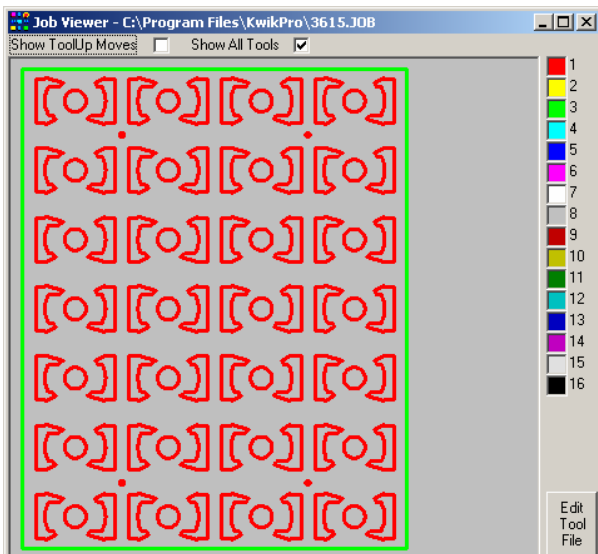

From CAD to Path in Seconds

The path may be defined with a DXF, PLT or G Code file or recorded with the advanced Jog & Teach function.

Up to 16 tools allow independent speeds, Z heights, timers etc. to be set for the different "layers" of a CAD file.

The Cloning function simplifies setup with redundant rows & columns. This is also ideal for filling, spraying and potting applications.