




# Application Bulletin

## 3618

### Dispensing 2 Materials

Our exclusive **Center-Shift** dual valve mount provides software controlled changeover for fast positioning and lowering of the correct valve and pressurizing the corresponding tank.

This system accommodates most valves / syringe systems available today. A micro adjustment feature is built-in to the design.

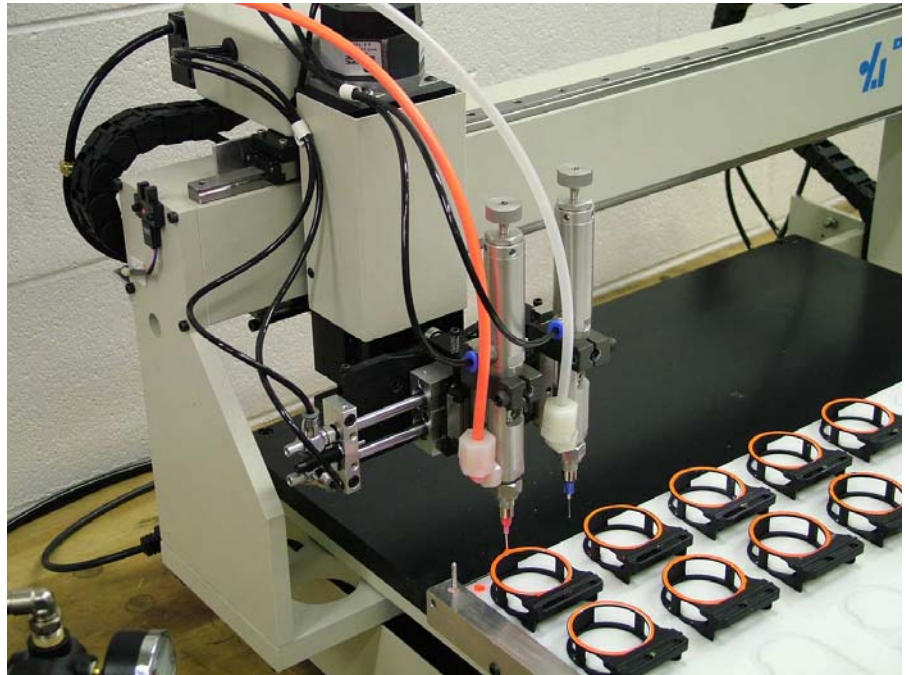

Palletized Production

Our optional **Pro-Pallet** system includes side guides and an "origin" pin for locating the removable pallets.

Production is streamlined by allowing the operator to load / unload pallets during the machine cycle. With the included step & repeat (cloning) function, setup is a snap!



**The Versatile RP-2415 Robot**  
Features a 24" x 15" work area