



Application Bulletin


3633

Powder Dispensing System

The RP-1215 is tooled with a canister to hold powder (.005"-.020" dia) and dispense a fixed volume via our exclusive positive displacement method. Only one moving part means reliable performance.

Parts remain stationary on the large and flat (12" x 24") machine bed which provides easy mounting of fixtures, nests etc.

The RP system features pre-loaded lead screws and ball slides for precise positioning, and fast thru put.

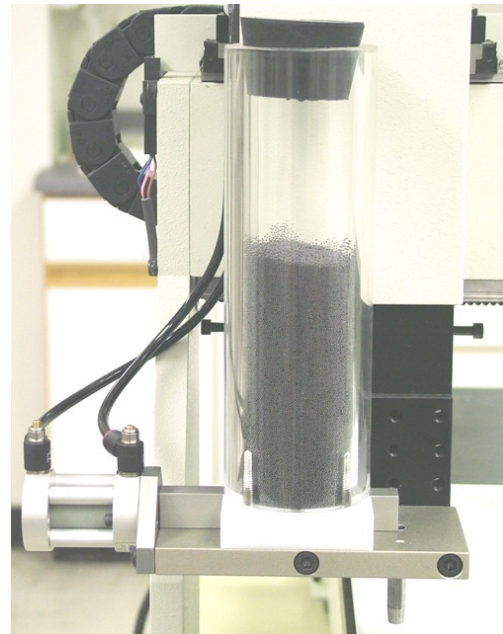

Pro Pallet Fixturing System

Includes fixture plate and two pallets.

The removable pallets are accurately retained for positioning and ease of load / unloading.

This allows the operator to load the second pallet while the machine is filling the existing one. Pallets are available in different materials and laser cut or cnc machined.

**The RP-1215 Robot
With Pro-Pallet Fixture**